

Operating instructions

Magnetically coupled centrifugal pump
ProMinent® von Taine® 0502 PP and PVDF



von Taine® 0502 PP

von Taine® 0502 PVDF



Type: ☐ 0502 PP ☐ 0502 PVDF

Serial-No. _____

Please enter type + serial number of the pump here !

Please read the manual instructions completely before bringing the machine into service!

Do not throw it away!

Damage caused by an operator's error will cancel the right to all warranty claims!

Imprint:

**Operating instructions Magnetically coupled centrifugal pump
ProMinent® von Taine® 0502 PP and PVDF
© ProMinent Dosiertechnik GmbH, 2003**

**ProMinent Dosiertechnik GmbH
Im Schuhmachergewann 5-11
69123 Heidelberg
Germany**

info@prominent.de
www.prominent.de

**Specifications subject to change without notice !
Printed in Germany**

TABLE OF CONTENTS

1	General information	5
1.1	Authorized use of the pump.....	5
1.2	Sound intensity level.....	5
2	Safety.....	5
2.1	Identification of safety instructions in the operating manual.....	5
2.2	Qualification and training of operating personnel.....	6
2.3	Hazards in the event of non-compliance with safety instructions	6
2.4	Compliance with regulations pertaining of safety work	6
2.5	Safety instructions relevant for operation.....	6
2.6	Safety instructions relevant for maintenance, inspection and assembly work	6
2.7	Unauthorized alterations and production of spare parts.....	7
2.8	Unauthorized modes of operation.....	7
3	Transportation and storage	7
3.1	Transportation	7
3.2	Storage.....	7
3.3	Ambient conditions required for transportation and storage.....	7
4	Functional characteristics	7
4.1	General description	7
4.2	Design	7
4.3	Materials.....	8
5	Mounting and installation	8
5.1	Examples of mounting	8
5.2	Hoses and tubes	8
5.2.1	The suction line	8
5.2.2	The delivery line	8
5.3	Electrical connection.....	8
6	Starting and shutdown procedures	9
6.1	Preparations for starting	9
6.2	Starting procedure.....	9
6.3	Operation	10
6.4	Shutdown procedure	10
6.5	Safe disposal of waste parts.....	10
7	Maintenance.....	10
7.1	General information	10
7.2	Preventive maintenance	10

7.3	Disassembly of the pump	12
7.4	Re-assembly of the pump.....	13
8	Troubleshooting	13
9	Technical data.....	14
10	Spare parts	15
10.1	Exploded view	15
10.2	Bill of materials von Taine® 0502 PP	16
10.3	Bill of materials von Taine® 0502 PVDF.....	17
11	Appendix.....	18
11.1	Dimensional drawing of von Taine® 0502 PP and PVDF	18
11.2	Characteristic curves	19
11.3	Motor data sheet	20
11.4	EC Declaration of Conformity	21

1 General information

The pump may only be used in the range of applications authorized by the manufacturer. In case of modified operating conditions, please consult your supplier and / or the manufacturer.

1.1 Authorized use of the pump

- Delivery of low-viscosity liquids resembling water.
- Delivery of acids, alkaline solutions etc.
- Delivery of gaseous fluids.
- No other than the authorized use nor any conversion of the pump are permitted.

WARNING

Make sure that the materials used for the pump are resistant to the fluids being delivered!
(see the ProMinent list of resistances)

- If you deliver crystallising fluids, make sure that the fluid does not crystallise within the pump. Should this happen, carefully clean all parts being in contact with the fluid once the pump has been shut off.

NOTE

Disassembly of the pump will cancel the right to all warranty claims!

1.2 Sound intensity level

The sound intensity level of this pump is < 70 dB (A) according to DIN EN 12639 (noise measurement of liquid pumps and pump units).

2 Safety

This operating manual gives basic instructions which are to be observed during installation, operation and maintenance of the pump. It is therefore imperative that the manual be read by the responsible personnel / operator prior to assembly and commissioning. It is always to be kept available at the installation site.

It is not only the general safety instructions contained under this main heading safety that are to be observed but also the specific information provided under the other main headings.

2.1 Identification of safety instructions in the operating manual

Safety instructions given in this manual non-compliance with which would affect safety are identified by the following symbol



(see DIN 4844-W9)

or where electrical safety is involved with



(see DIN 4844-W8)

Instructions non-compliance with which would give rise to malfunctioning of the machinery are identified by the word

WARNING

It is imperative that signs affixed to the machine, e.g.

- ➡ arrow indicating the direction of rotation
- ➡ symbols indicating fluid connection

- ☞ Warnings to protect the pump from dry-running.

be observed and kept legible.

2.2 Qualification and training of operating personnel

The personnel responsible for operation, maintenance, inspection and assembly must be adequately qualified. Scope of responsibility and supervision of the personnel must be exactly defined by the plant operator. If the staff does not have the necessary knowledge, they must be trained and instructed, which may be performed by the machine manufacturer or supplier on behalf of the plant operator. Moreover, the plant operator of the operating manual are fully understood by the personnel.

2.3 Hazards in the event of non-compliance with safety instructions

Non-compliance with the safety instructions may produce a risk to the personnel as well as to the environment and the machine and results in a loss of any right to claim damages.

For example, non-compliance may involve the following hazards:

- ☞ Failure of important functions of the machine / plant.
- ☞ Failure of specified procedures of maintenance and repair.
- ☞ Exposure of people to electrical, mechanical and chemical hazards.
- ☞ Endangering the environment owing to hazardous substances being released.

2.4 Compliance with regulations pertaining of safety work

When operating the pump, the safety instructions contained in this manual, the

relevant national accident prevention regulations and any other service and safety instructions issued by the plant operator are to be observed.

2.5 Safety instructions relevant for operation

- ☞ If hot or cold machine components involve hazards, they must be guarded against accidental contact.
- ☞ Guards for moving parts (e.g. coupling) must not be removed from the machine while in operation.
- ☞ Any leakage of hazardous (e.g. explosive, toxic, hot) fluids must be drained away so as to prevent any risk occurring to persons or the environment. Statutory regulations are to be complied with.
- ☞ Hazards resulting from electricity are to be precluded (see, for example, the VDE Specifications and the bye-laws of the local power supply utilities).

2.6 Safety instructions relevant for maintenance, inspection and assembly work

It shall be the plant operator's responsibility to ensure that all maintenance, inspection and assembly work is performed by authorized and qualified personnel who have adequately familiarized themselves with the subject matter by studying this manual in detail.

Any work on the machine shall only be performed when it is at a standstill, it being imperative that the procedure for shutting down the machine described in this manual be followed.

Pumps and pump units which convey hazardous media must be decontaminated. On completion of work all safety and protective facilities must be re-installed and made operative again.

Prior to restarting the machine, the instructions listed under 'Initial commissioning' are to be observed.



The pump is magnetically coupled. Attention: Coming in contact with permanent magnetic parts during repair or maintenance work dangerously exposes to magnetic forces which, for example, may influence pacemakers.
👉 Keep your distance!

2.7 Unauthorized alterations and production of spare parts

Any modifications may be made to the machine only after consultation with the manufacturer. Using spare parts and accessories authorized by the manufacturer is in the interest of safety. Use of other parts may exempt the manufacturer from any liability.

2.8 Unauthorized modes of operation

The reliability of the machine delivered will be only guaranteed if it is used in the manner intended, in accordance with clause 1 of this manual. The limit values specified in the data sheet must under no circumstances be exceeded.

3 Transportation and storage

3.1 Transportation

The pump is delivered by the manufacturer in a ready-to-work state. In the event of damages occurring during and due to transportation, the forwarding agent must make a factual statement. The pump should always be transported appropriately and according to the state of the art.

3.2 Storage

An eventual storage place must be absolutely dry. Make sure that the interior of the pump is protected from pollutants.

3.3 Ambient conditions required for transportation and storage

Temperature range: -10°C to 50°C.
Humidity of the air: max. 95 % relative humidity, non-condensing.

4 Functional characteristics

4.1 General description

This magnetically coupled centrifugal pump type von Taine® is a sucking single-stage centrifugal pump made of plastics and designed in modular system for horizontal mounting. The pump and electric motor are connected by a magnetic clutch which transmits the drive power to the impeller.

4.2 Design

The pump housing, impeller, impeller magnet, and magnet deviating housing are made of plastics. In the standard version, the center shaft is constructed from oxide ceramic whereas the bearings are made of oxide ceramic. The magnet deviating housing hermetically seals the fluid against all atmospheric influences. Due to the magnetic power transmission, the center shaft needs not to be sealed. In contrast to mechanically or gland sealed pumps, this system prevents any leakage of fluid at the shaft.

The pump housing parts are sealed by static o-rings. The impeller of the pump is a radial-flow wheel.

Depending on the fluid to be delivered, each component of the pump is available in various materials.

NOTE

The materials used are listed on the name plate or the delivery note!

4.3 Materials

Type	0502 PP	0502 PVDF
Pump housing	PP	PVDF
Impeller	PP	PVDF
Impeller magnet	PP	PVDF
Rear casing	PP	PVDF
Center shaft	oxide ceramic	
Bearing	oxide ceramic	
Static packings	FPM (Viton)	

5 Mounting and installation


The pump should be installed at a place allowing easy access at all times. Make sure to meet the following values:

Ambient temperature	-10 °C up to +40 °C
Humidity of the air:	95 % relative humidity, non-condensing

5.1 Examples of mounting

The pump is set up to be mounted horizontally, but may also be mounted vertically, with the motor component pointing upwards.

This pump is not self-priming and therefore requires a feed supply.

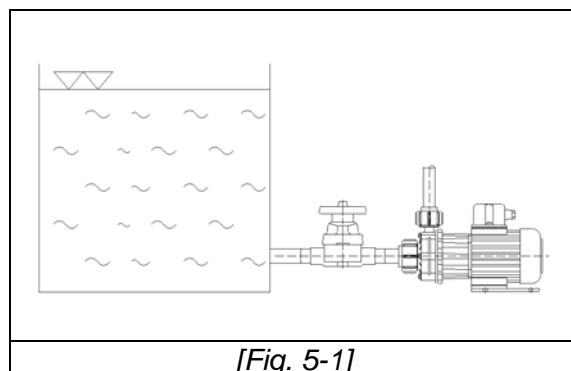

5.2 Hoses and tubes

The cross-sections of the tubes must correspond to the suction and delivery ports. All suction and delivery tubes to the pump housing should be free of tensile stress. The weight of the tubes must not rest on the housing!

WARNING

Do not install any quick-acting stop valves into the tubes! Pressure jerks may damage the pump housing.

5.2.1 The suction line


- ☞ The suction line must be a tube or hose which cannot be deformed by the resulting partial vacuum or by high temperatures.
- ☞ The suction line must be a tube or hose which cannot be deformed by the resulting partial vacuum or by high temperatures.
- ☞ When dimensioning the tubes, fittings etc., make sure that the flow resistances are kept as low as possible.
- ☞ The flow velocity within the piped suction line should not exceed the limit of 1m/s

5.2.2 The delivery line


- ☞ The standard flow velocity within the suction line is 3m/s.
- ☞ To be able to adjust the flow rate, we recommend the installation of a control element inside the delivery line.

5.3 Electrical connection

AC motors should be connected according to the following illustration:

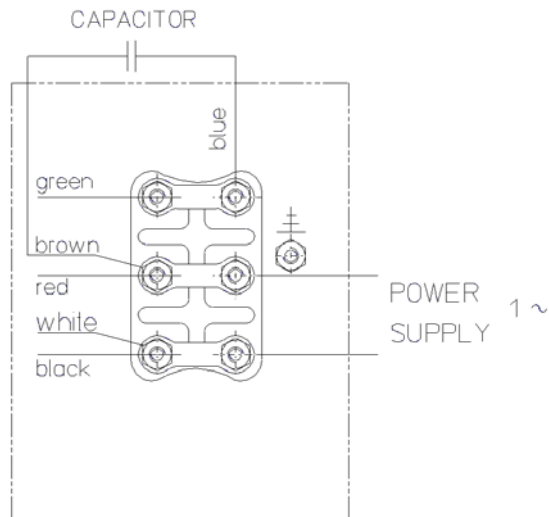


[Fig. 5-2]

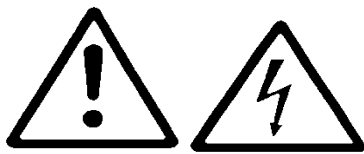

All electrical connections to the pump may only be performed by experts!

- ☞ The direction of rotation indicated by an arrow on the pump must be respected and controlled after installation.

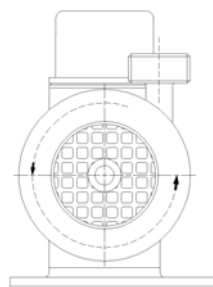

[Fig. 5-3]

WARNING

Do not check the direction of rotation without having filled fluid in the pump!

- ☞ The motor must be equipped with a motor protection switch.
- ☞ The power supply must have been cut for at least 5 minutes before you may start any work at the terminal box of the pump.
- ☞ Make sure that the data given on the name plate corresponds to the existing power supply.
- ☞ All electrical connections and installations of additional protection devices should be performed by an expert in accordance with the instructions of the local power suppliers and / or the Association of German Electrotechnical Engineers VDE.

6 Starting and shutdown procedures

6.1 Preparations for starting

- ☞ The pump housing and the suction line must be filled with water or the fluid to be delivered.

WARNING

Avoid any dry-running of the pump!

NOTE

We recommend installing dry-running protection devices such as flow indicators, contact manometers, differential pressure switches or level controllers!

- ☞ Tighten all screwed connections and fittings.
- ☞ Entirely open all shut-off devices of the suction and delivery lines.

6.2 Starting procedure

- ☞ Switch on the motor.
- ☞ Check the direction of rotation of the motor by switching it on and off in immediate succession. The direction of

rotation must be in accordance with the arrow figuring on the pump.

- ☞ Adjust the operating point by slowly closing the shut-off device of the delivery line. If there is no shut-off device installed, the operating point will be adjusted automatically in accordance with the pump curve.

WARNING

Do not run the pump with a closed delivery line for a longer period of time. This may heat up the fluid inside the pump housing and thus damage interior components of the pump!

WARNING

Always protect the pump from coarse impurities and magnetisable metal particles!

6.3 Operation

If the motor has been switched off by the motor protection switch, proceed as follows:

- ☞ Before switching on the motor again, check whether the impeller rotates readily.
- ☞ Make sure that the suction line and the pump housing are filled with fluid.
- ☞ Switch on the motor.

If the pump only delivers for a short period of time and then stops delivering, the magnetic clutch has been disengaged. Proceed as described in chapter 8 below.

6.4 Shutdown procedure

- ☞ Switch off the motor.
- ☞ Close all shut-off devices.
- ☞ In case some fluid remains within the pump, secure the shut-off devices to prevent an accidental opening.

6.5 Safe disposal of waste parts

This product as a whole as well as parts of it must be disposed of in an environmentally safe way:

WARNING

Please comply with the respective regulations that are currently in force at your place (especially with regard to electronic scrap) !

As for Germany:

Used parts that have been cleaned will be accepted by the local public disposal sites.

7 Maintenance

7.1 General information

The pump is designed for continuous operation and is therefore maintenance-free.

7.2 Preventive maintenance

- ☞ Clean the ventilator cowl at least **once per month** in order to prevent the motor from overheating!!
- ☞ Although bearings, center shaft and thrust rings are also designed for continuous operation, they should periodically be inspected for choking. If dirty, silty or crystallising fluids are delivered, then the pump should be inspected.

WARNING

Make sure there are no magnetisable metal particles in the working area if you assemble or disassemble the pump!




When the complete head of the pump is assembled or disassembled, magnetic forces can cause serious injury!

- ☞ Check the static sealings in regular intervals and replace them, if necessary.

7.3 Disassembly of the pump


1. Remove the 6 screws (901.1) in the pump housing (101).

Required tool: fork or ring spanner!

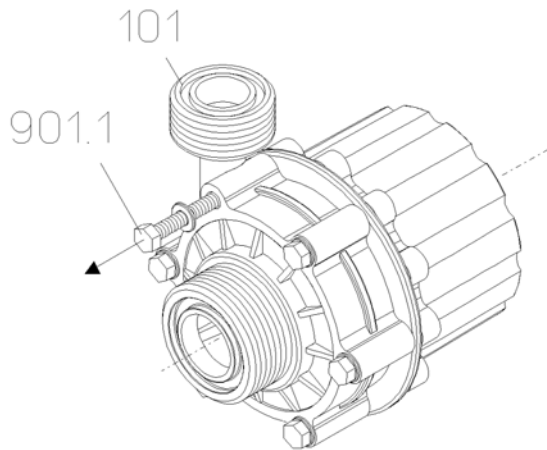


2. Take the complete head of the pump (001) off the lantern (113).

No tools required!

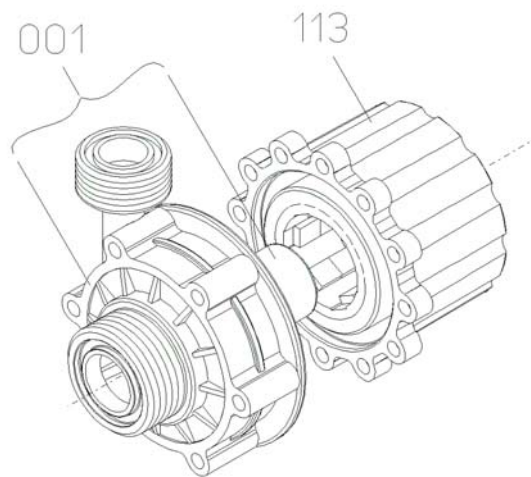


3. Take the pump housing (101) off the center shaft (211) and pull the impeller (847.2) out of the magnet deviating housing (161).

No tools required!

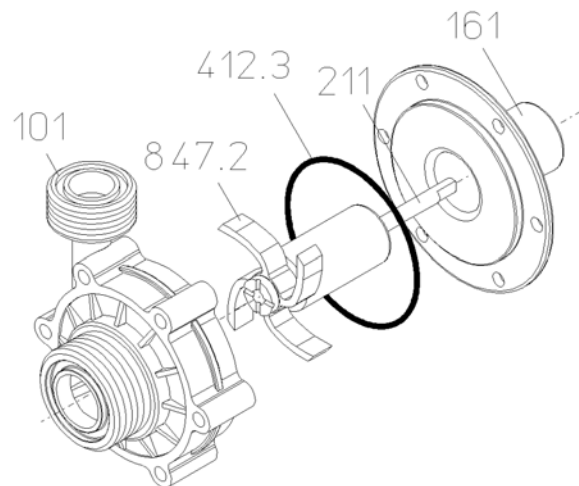


4. Take the thrust ring (314.1) off the pump housing (101).

Required tool: center shaft (Pos.211)!

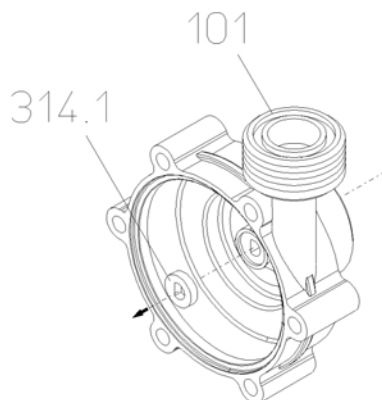

5. Take the thrust ring (314.2) off the magnet deviating housing (161).

Required tool: center shaft (Pos.211)!

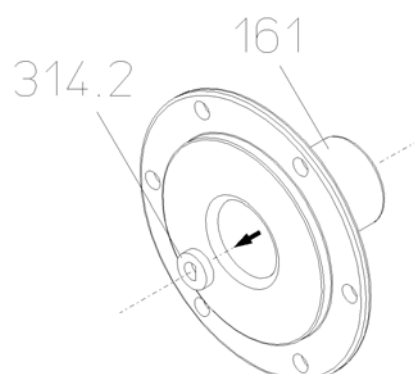

7.4 Re-assembly of the pump

To assemble the complete head of the pump without motor, repeat step 1 to 5 in reverse order.

WARNING

Once the complete head of the pump has been assembled, the impeller and impeller magnet (847.2) should be able to slide axially on the center shaft (211)!

- Any other repair than the replacement of worn parts should be done by an expert, since inappropriate maintenance work usually results in unnecessary costs.
- If the pump will not be in operation for a longer period of time, it should be cleaned carefully. Otherwise you risk that residues remaining in the pump may harden and jam the impeller, once the pump is started again.

8 Troubleshooting


Malfunction	Causes	Corrective action
Pump does not work when switched on	No voltage	Test the voltage
	Impurities in the pump housing	Remove the impurities
Magnetic clutch is disengaged	Specific gravity and/or viscosity of the fluid is too high	Reduce the delivery rate; use a stronger magnetic clutch and a more powerful motor
	Pump was switched off, then switched on again before the rotor stopped	The rotor should have stopped before the pump can be switched on again
Motor is overheating	Clogged ventilator cowl	Clean the ventilator and the cowl
Pump is working, but not delivering	Gas accumulation in the lines	Evacuate the lines
Too much flow noise	Cavitation	Increase the suction line cross-section
		Reduce the delivery rate
		cool down the fluid
Pump is not sucking	No fluid in the pump	Open the vane
Delivery rate too low	Air in the system	Evacuate the system
	Suction and delivery line cross-sections are too small (significant losses)	Increase the suction and delivery line cross-sections
	Valve is not entirely open	Entirely open the valve
Delivery rate too high	Pump losses are less significant than presumed	Install a flow control valve in the delivery line

9 Technical data

Order- No.	1023089	1023095
Pump type	von Taine® 0502 PP	von Taine® 0502 PVDF
Hydraulic data		
Maximum flow	1800 l/h	1800 l/h
Operating range	30 - 1800 l/h	30 - 1800 l/h
Maximum head	4,5 mWC	4,5 mWC
Maximum system pressure at 20°C	1,0 bar	2,0 bar
Electrical data		
Motor output	60 W	60 W
Rated voltage _{50 Hz} (V)	230	230
Rated current _{50 Hz} (A)	0,7	0,7
No. of revolutions _{50 Hz} (rpm)	2871	2871
cos φ	0,961	0,961
Protection class	IP 55	IP 55
Temperature class	F	F
Further data		
Maximum temperature of the medium	80 °C	95 °C
Maximum viscosity	<20 mPas	<20 mPas
Maximum ambient temperature	40 °C	40 °C
Maximum density of the medium	1,25 - 1,35 kg/dm³	1,25 - 1,35 kg/dm³
Suction port	G 5/4	G 5/4
Discharge port	G 1	G 1
Pump housing	PP	PVDF
Impeller	PP	PVDF
Colour of delivery unit	black	white
Bearing	oxide ceramic	oxide ceramic
Center shaft	oxide ceramic	oxide ceramic
Thrust ring (impeller)	oxide ceramic	oxide ceramic
Thrust ring (housing)	oxide ceramic	oxide ceramic
Sealing material	FPM (viton)	FPM (viton)
Colour of motor	RAL 2003	RAL 2003
Weight	2,7 kg	2,8 kg
Dimensions LxTxH (mm)	240 x 120 x 145	240 x 120 x 145

10 Spare parts

10.1 Exploded view

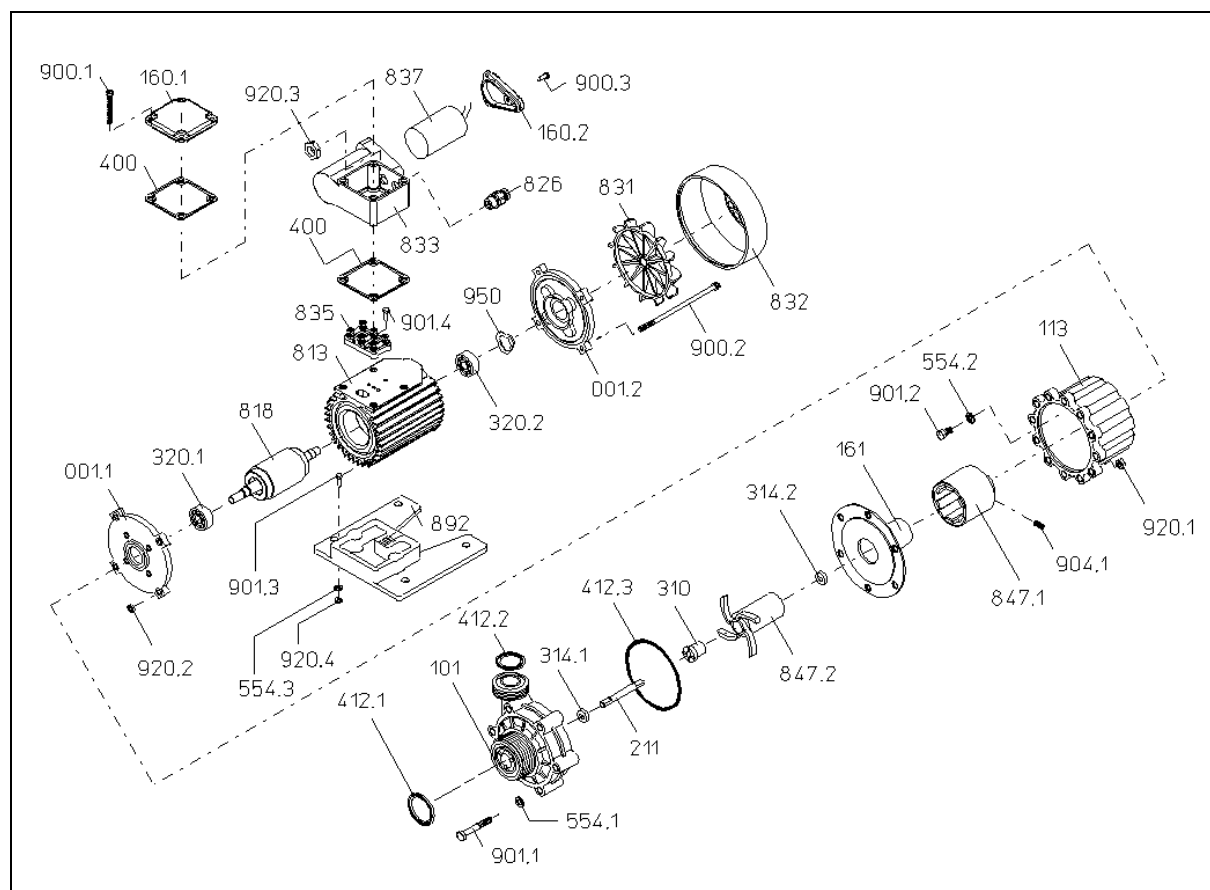

10.2 Bill of materials von Taine® 0502 PP

Serial-No: _____

Pos.	Qty.	Order-No.	Designation	Material	Qty.
001.1	1	PUMA.00.0070.001	end plate A-side	PPS	
001.2	1	PUMA.00.0070.002	end plate B-side	PPS	
101	1	PUMA.05.0035.007	pump housing G5/4 - G1	polypropylene	
160.1	1	PUMA.00.0045.014	terminal box cover plate	polypropylene	
160.2	1	PUMA.00.0045.011	cover	polypropylene	
161+314.2	1	PUMA.05.0035.036	rear casing with starting ring	polypropylene	
113	1	PUMA.00.0090.224	lantern	polypropylene	
211	1	PUMA.05.0050.083	center shaft	oxide ceramic	
310	1	PUMA.05.0050.046	bearing	oxide ceramic	
314.1	1	PUMA.05.0050.040	thrust ring (housing)	oxide ceramic	
320.1	1	PUMA.00.0090.293	ball bearing 6000 ZZ		
320.2	1	PUMA.00.0090.293	ball bearing 6000 ZZ		
400	2	PUMA.00.0045.012	flat packing	EPDM	
412.1	1	FISF.00.0000.181	o-ring 26x3,5 (suction side)	FPM (viton)	
412.2	1	PUMA.05.0035.012	o-ring 21x3 (delivery side)	FPM (viton)	
412.3	1	PUMA.05.0035.020	o-ring 66x2	FPM (viton)	
554.1	6	PUMA.05.0035.014	plain washer Ø5,3	A2 - DIN125	
554.2	4	PUMA.05.0035.014	plain washer Ø5,3	A2 - DIN125	
554.3	4	PUMA.00.0070.005	serrated lock washer Ø4,3	A2 - DIN6798	
813	1	PUMA.00.0070.003	winding with housing 60W 1-ph.	230V - 50Hz	
818	1	PUMA.00.0070.009	rotor with shaft 60W		
826	1	PUMA.00.0090.290	cable entry M12		
831	1	PUMA.00.0090.209	paddle	polypropylene	
832	1	PUMA.00.0090.210	ventilator cowl	polypropylene	
833	1	PUMA.00.0045.010	terminal box	polypropylene	
835	1	PUMA.00.0090.035	terminal board	PPS	
837	1	PUMA.00.0090.155	capacitor 4µF		
847.1	1	PUMA.05.0035.042	drive magnet	polypropylene	
847.2	1	PUMA.05.0035.005	impeller with magnet	polypropylene	
892	1	PUMA.00.0070.012	mounting plate	polypropylene	
900.1	4	PUMA.00.0090.042	pan head screw M4x45	A2 - DIN84	
900.2	4	PUMA.00.0070.006	collar screw M4x108	galvanized	
900.3	3	SO00.00.0000.092	screw	A2 - DIN7981	
901.1	6	PUMA.05.0035.015	hexagon head cap screw M5x35	A2 - DIN933	
901.2	4	PUMA.00.0090.223	hexagon head cap screw M5x10	A2 - DIN933	
901.3	4	PUMA.00.0070.004	hexagon head cap screw M4x12	A2 - DIN933	
901.4	2	PUMA.00.0090.031	head cap screw M4x12	galvanized	
904.1	1	PUMA.03.0030.002	threaded pin	A2 - DIN916	
920.1	6	PUMA.00.0090.225	hexagon nut M5	A2 - DIN934	
920.2	4	PUMA.00.0250.030	hexagon nut M4	A2 - DIN934	
920.3	1	SO00.00.0000.993	counternut M12		
920.4	4	PUMA.00.0250.030	hexagon nut M4	A2 - DIN934	
950	1	PUMA.00.0070.007	ondular washer		

10.3 Bill of materials von Taine® 0502 PVDF


Serial-No: _____

Pos.	Qty.	Order-No.	Designation	Material	Qty.
001.1	1	PUMA.00.0070.001	end plate A-side	PPS	
001.2	1	PUMA.00.0070.002	end plate B-side	PPS	
101	1	PUMA.05.0035.016	pump housing G5/4 - G1	PVDF	
160.1	1	PUMA.00.0045.014	terminal box cover plate	polypropylene	
160.2	1	PUMA.00.0045.011	cover	polypropylene	
161+314.2	1	PUMA.05.0035.040	rear casing with thrust ring	PVDF	
113	1	PUMA.00.0090.224	lantern	polypropylene	
211	1	PUMA.05.0050.083	center shaft	oxide ceramic	
310	1	PUMA.05.0050.046	bearing	oxide ceramic	
314.1	1	PUMA.05.0050.040	thrust ring (housing)	oxide ceramic	
320.1	1	PUMA.00.0090.293	ball bearing 6000 ZZ		
320.2	1	PUMA.00.0090.293	ball bearing 6000 ZZ		
400	2	PUMA.00.0045.012	flat packing	EPDM	
412.1	1	FISF.00.0000.181	o-ring 26x3,5 (suction side)	FPM (viton)	
412.2	1	PUMA.05.0035.012	o-ring 21x3 (pressure side)	FPM (viton)	
412.3	1	PUMA.05.0035.020	o-ring 66x2	FPM (viton)	
554.1	6	PUMA.05.0035.014	plain washer Ø5,3	A2 - DIN125	
554.2	4	PUMA.05.0035.014	plain washer Ø5,3	A2 - DIN125	
554.3	4	PUMA.00.0070.005	serrated lock washer Ø4,3	A2 - DIN6798	
813	1	PUMA.00.0070.003	winding with housing 60W 1-ph.	230V - 50Hz	
818	1	PUMA.00.0070.009	rotor with shaft 60W		
826	1	PUMA.00.0090.290	cable entry M12		
831	1	PUMA.00.0090.209	paddle	polypropylene	
832	1	PUMA.00.0090.210	ventilator cowl	polypropylene	
833	1	PUMA.00.0045.010	terminal box	polypropylene	
835	1	PUMA.00.0090.035	terminal board	PPS	
837	1	PUMA.00.0090.155	capacitor 4µF		
847.1	1	PUMA.05.0035.042	drive magnet	polypropylene	
847.2	1	PUMA.05.0035.021	impeller with magnet	PVDF	
892	1	PUMA.00.0070.012	mounting plate	polypropylene	
900.1	4	PUMA.00.0090.042	pan head screw M4x45	A2 - DIN84	
900.2	4	PUMA.00.0070.006	collar screw M4x108	galvanized	
900.3	3	SO00.00.0000.092	screw	A2 - DIN7981	
901.1	6	PUMA.05.0035.015	hexagon head cap screw M5x35	A2 - DIN933	
901.2	4	PUMA.00.0090.223	hexagon head cap screw M5x10	A2 - DIN933	
901.3	4	PUMA.00.0070.004	hexagon head cap screw M4x12	A2 - DIN933	
901.4	2	PUMA.00.0090.031	pan head screw M4x12	galvanized	
904.1	1	PUMA.03.0030.002	threaded pin	A2 - DIN916	
920.1	6	PUMA.00.0090.225	hexagon nut M5	A2 - DIN934	
920.2	4	PUMA.00.0250.030	hexagon nut M4	A2 - DIN934	
920.3	1	SO00.00.0000.993	counternut M12		
920.4	4	PUMA.00.0250.030	hexagon nut M4	A2 - DIN934	
950	1	PUMA.00.0070.007	ondular washer		


Subject to technical alteration!

11 Appendix

11.1 Dimensional drawing of von Taine® 0502 PP and PVDF

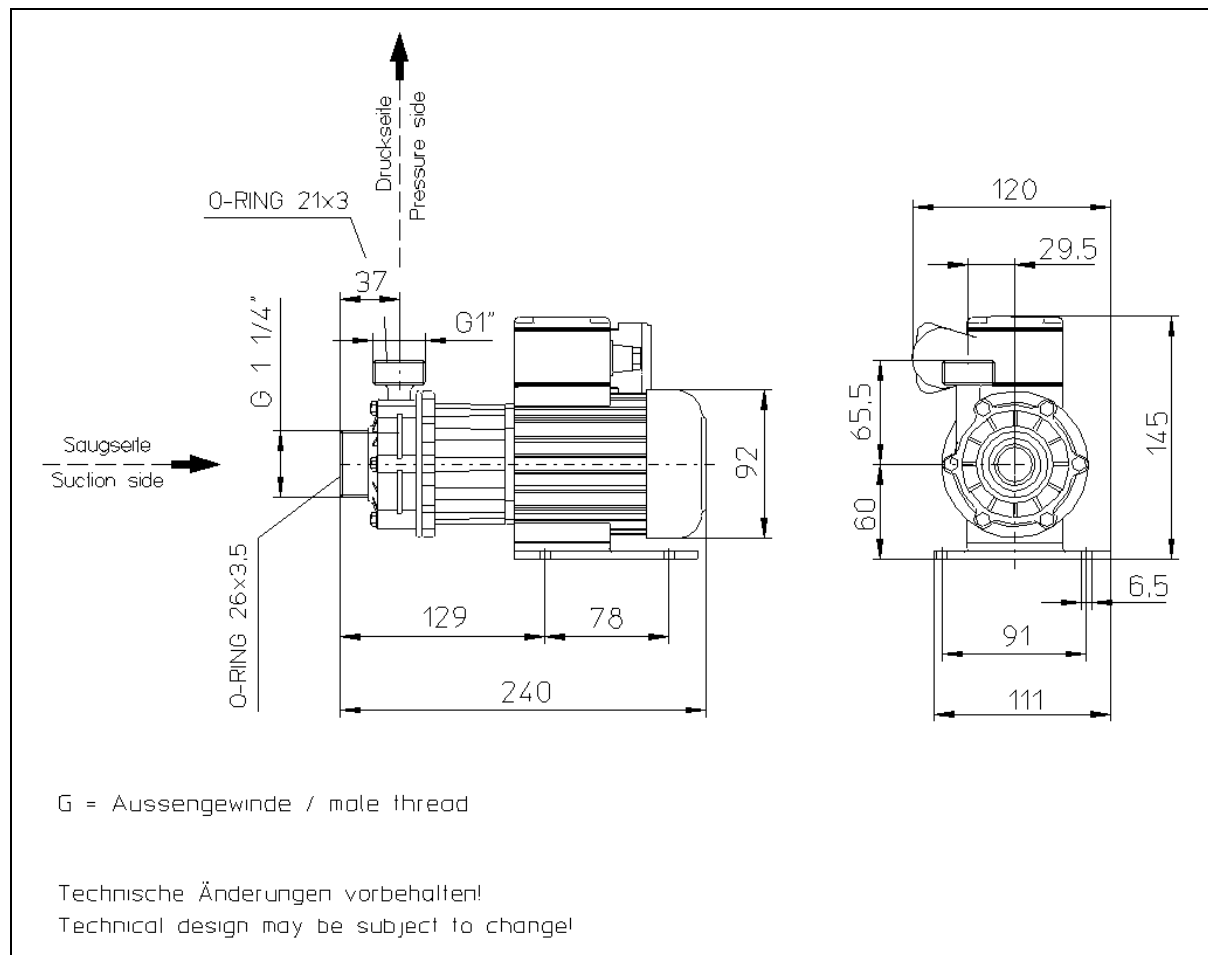

11.2 Characteristic curves

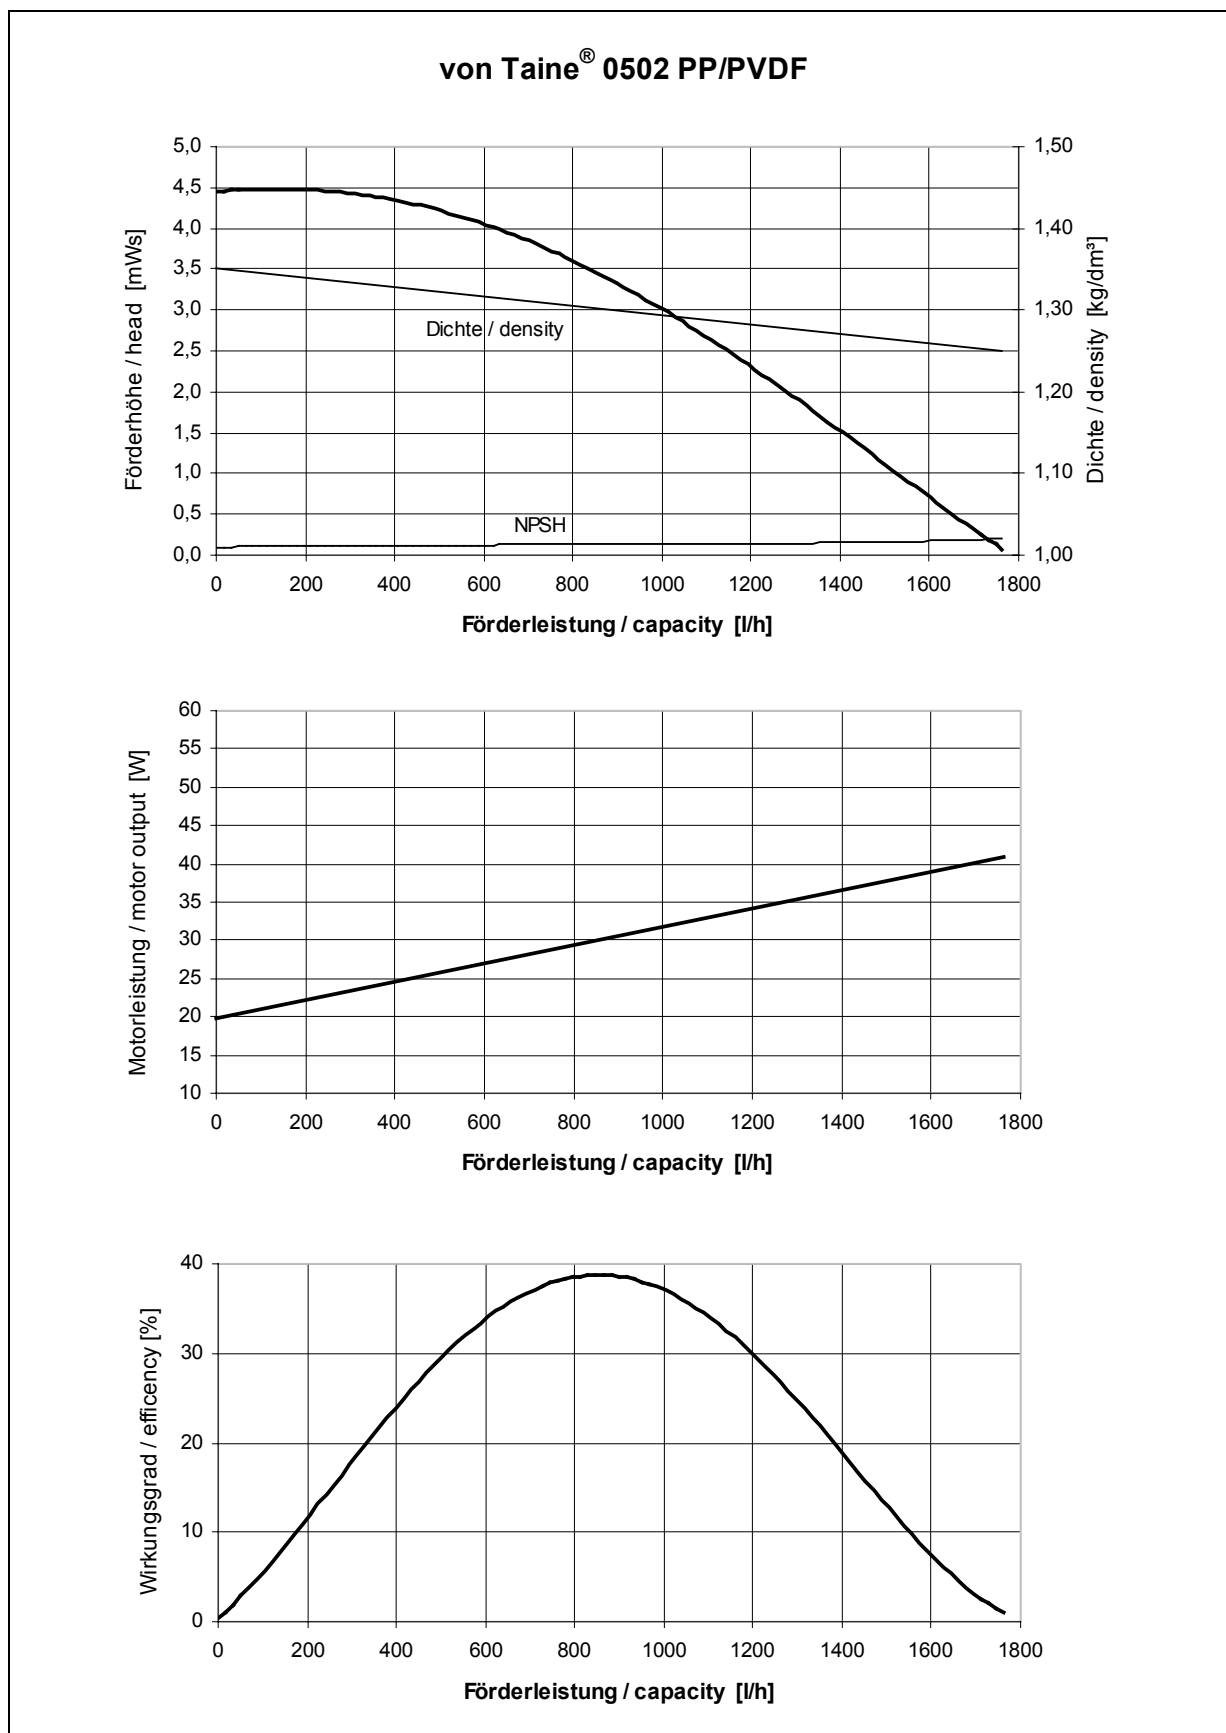

11.3 Motor data sheet

Motor Datenblatt Motor data sheet Fiche technique pour moteur					
Motor-Typ motor type type du moteur	St.69,5/50-1		Leistungsfaktor cosφ power factor facteur de puissance	0,961	
Maschinenart type of machine désignation	single-phase motor		Wirkungsgrad efficiency rendement	42	%
Bauform mounting construction	IM V3		Wärmeklasse temperature class classe d'isolement	F	
Bemessungsleistung rated output puissance nominale	0,060	kW	Anzugsstrom starting current courant de démarrage	2,86	fach fold fois
Schutzart protection class degré de protection	IP55		Anzugsmoment starting torque couple de démarrage	0,75	fach fold fois
Bemessungsspannung rated voltage tension nominale	1-ph. 220-240V (50Hz)		Kippmoment pull-out torque couple de décrochage	2,3	fach fold fois
Bemessungsstrom rated current courant nominal	0,7 A		Umgebungstemperatur ambient temperature température ambiante	max. 40 °C	
Bemessungsfrequenz rated frequency fréquence nominale	50Hz		Schaltung connection branchement	1-ph.	
Bemessungsdrehzahl rated speed vitesse nominale	2871	U/min. rpm t/mn	Identcode identcode code d'identification		
Pumpentyp pump type type de pompe	magnetically coupled centrifugal pump				
Anmerkung comment remarque	Die Daten entsprechen den Angaben der Motorenhersteller. Kenndaten funktionsgleicher Motoren anderer Hersteller ändern sich nur unwesentlich. Angabe ohne Gewähr.				
	The data correspond to the details given by the motor manufacturers. Ratings of motors with the same functions made by other producers show insignificant changes only. This information is supplied without liability.				
	Les données techniques correspondent au descriptif du fabricant des moteurs. Les données techniques de moteurs similaires chez d'autres fabricants varient très peu. Ces données sont d'ordre général.				
ProMinent Dosiertechnik GmbH · 69123 Heidelberg · Germany				Nr. / No.	
				Datum / Date 19.11.2003	

11.4 EC Declaration of Conformity

EC Declaration of Conformity

We,

ProMinent Dosiertechnik GmbH
Im Schuhmachergewann 5 - 11
D - 69123 Heidelberg

hereby declare that, on the basis of its functional concept and design and in the version brought into circulation by us, the product specified in the following complies with the relevant, fundamental safety and health stipulations laid down by EC regulations.
Any modification to the product not approved by us will invalidate this declaration.

Product description : ***Circulation pump***

 
Product type : ***vonTAINE***

Serial number : ***see type identification plate on device***

Observed relevant EC regulations : ***EC - machine regulation (98/37/EC)***
EC - low voltage regulation (73/23/EEC)
EC - EMC - regulation (89/336/EEC subsequently 92/31/EEC)

Date/manufacturer's signature :

21.10.2003



The undersigned :

Dr. Rainer V. Dulger, Executive Vice President R&D and Production

Notes:

[illegible]

Anschriften- und Liefernachweis durch den Hersteller /
Addresses and delivery by the manufacturer /
Adresses et liste des fournisseurs fournies par le constructeur /
Para informase de las direcciones de los distribuidores, dirigirse al fabricante

ProMinent Dosiertechnik GmbH
Im Schuhmachergewann 5-11 • 69123 Heidelberg
Germany
Tel.: +49 6221 842-0
Fax. +49 6221 842-419
info@prominent.de
www.prominent.de